


# PROJECTION CLOCK USER MANAU

## Function

- 4-bit LED display and 4-bit LCD projection display time.
- Clock Function: Display Time, minutes, and can realize 12/24 hour .
- Date function: Display "Month", "Day", "Year"(from 2000 to 2099).
- Alarm function: set daily alarm.
- Temperature: display °F or °C temperature, and switch. Normal Measurement range-10 °C ~ 50 °C (14F ~ 122°F).
- Display Mode: under temperature mode, long press Mode key to switch display mode,
- Brightness Adjustment Function: Press UP key to adjust two levels of brightness. Automatic half-light function: 18 : 00-6 : 00 brightness automatic dimming, and can set automatic half-light interval.
- Time Memory Function (3V battery).
- Power: DC 5V

## Key Diagram

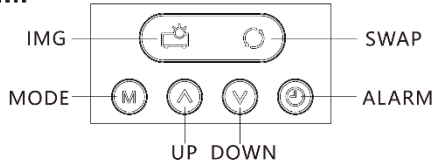

## OPERATION

1. Power on, LED full display about 2s, then "Bi" sound into the normal clock mode, the default 12-hour system PM12 : 00
2. In normal clock Mode, press the Mode key to enter its corresponding function Mode in the following order: clock MODE → date MODE → temperature MODE → night ON/OFF
3. In Time and date Mode, long press MODE key to enter the setting state, and press the UP or DOWN key to adjust the values,
4. In normal mode, press the ALARM button to display ALARM mode. And press the ALARM button to turn the ALARM on or off.
5. Any mode, long press ALARM key to enter the setting state, and press the UP or DOWN key to adjust the value,
6. Normal time, date, temperature mode, press the UP key directly adjust two brightness
7. Lights automatically dim between 18:00 and 6:00 when night mode is on.
8. In temperature Mode, press the MODE key until there is a sound of Bi, switch to LED to show the time, date and temperature in turn, time show 10 seconds, date and temperature show 3 seconds each; press the MODE key again to show the normal time.
9. Display temperature, temperature mode press DOWN key for °C or °F conversion.
10. Projection Lamp clock: Display Time; Press IMG key to turn on or off the projection lamp clock; press SWAP key to turn the projection display content 180 °.
11. Power: DC 5.0V.
12. Time Memory Function (3V battery).

## Detailed instructions

### 1.Normal time mode:

- Power on, LED full display about 2s, then "Bi" sound into the normal clock mode, the default 12-hour system PM 12 : 00.
- In normal clock Mode, press the MODE key to enter its corresponding function Mode: clock Mode → date Mode → temperature Mode → night ON or OFF
- Normal time Mode, long press Mode key for about 2 seconds to enter time setting Mode and complete its setting with the UP or DOWN key in the following order. Press hold to increase or decrease quickly. 12/24 hour shift → hour → minute → exit
- Switch to 12 hour PM the PM sign will light up.
- In the setup state, leave the setup state for 10 seconds without pressing the key, and displaying the time of the current setup.

### 2.Date Mode

- In normal time state. Press Mode key to enter date Mode. it is January 1, 2018.
- date Mode, long press Mode key about 2 seconds to enter the date setting, and according to the following order through UP or DOWN key to complete its setting, press and hold fast increment/decrement. Year → month → day → exit.
- In the setup state, save for 10 seconds without pressing the button and exit the setup state, returning to time mode.

### 3.Alarm setting

- any mode, just press ALARM button to display ALARM mode ,and press it is on/off.
- any mode long press ALARM button for about 2 seconds to enter the setting state, and press the following order through UP/DOWN key to complete its settings, press and hold the rapid increase/decrease. Hour → minute → sleepiness time → choose the work day alarm (1-7/1-6/1-5) → exit .
- In the setup state, leave the setup state for 10 seconds without pressing the key, and return to the time mode.
- When any alarm goes off, it automatically returns to the alarm mode and emits "BiBi" sound, At the same time, the alarm signal flashes. At this point, the alarm can be stopped by pressing any key or by operating the alarm without pressing a button for 1 minute, but the alarm won't go off.

### 4.Temperature

- temperature pattern conversion between ° C/° F by simply pressing DOWN.
- In temperature Mode, press Mode key long until there is a Bi sound, switch to LED to show time date and temperature in turn, time show 10 seconds, date and temperature show 3 seconds each; then press Mode key long until there is a Bi sound, show normal time.
- The atmosphere light is long on, because the atmosphere light is hot, the detection temperature has an error, which is higher than the actual temperature.

### 5.Projection lamp clock

- the projection lamp is turned ON by default and the projection display is normal
- pressing the IMG key in any mode functions as an ON/OFF projection lamp, and press SWAP key to turn the projection content 180 ° .

### 6.Night mode

- normal time, date, temperature mode, just press UP key to adjust the brightness of the two grades directly, the default brightness.
- In time MODE, press MODE key three times to enter the night setting MODE, and press UP or DOWN to open/close the night MODE (the default is to turn off the night MODE) . When the night mode is on, the default is 18:00 to 6:00. When the night mode is on, long press the Mo DE key for about 2 seconds to enter the night mode time setting, setting the order as: Start → start → end → end.

### 7.Anti-intrusion at night

- In non-set state, long press ON button more than 3 seconds to turn off the LED display, to prevent night light screen interference sleep. After entering the off mode, you can press any key to open the LED display



MADE IN CHINA

## הנחיות מפורטות

1. מצב זמן רגיל: הפעלה, תוך כ-2 שניות תופיע תצוגת LED מלאה, לאחר מכן יישמע צליל "בי" במצב שעות רגיל, הגדרת ברירת המחדל של המערכת היא 12 שעות PM 12:00. במצב שעות רגיל, לחצו על מקש MODE לכניסה למצב הפונקציה התואמת: מצב שעות → מצב תאריך → מצב טמפרטורה / הפעלה או כיבוי בליטה. מצב שעה רגיל, לחצו על מקש MODE במשך כ-2 שניות לכניסה למצב הגדרה שעה והשלימו את ההגדרה שלו בעזרת מקש UP או DOWN בסדר הבא. לחצו לחיצה ארוכה להגדלה או להקטנה במהירות. מעבר בין 12/24 שעות → שעה → דקה → יציאה. במצב התקנה, השאירו את מצב ההתקנה במשך 10 שניות ללא לחיצה על שום מקש, ויוצג הזמן של ההתקנה הנוכחית.
2. מצב תאריך: במצב שעה רגיל, לחצו על מקש MODE לכניסה למצב תאריך. יופיע ה-1 בינואר, 2018. במצב תאריך, לחצו לחיצה ארוכה על מקש MODE במשך כ-2 שניות לכניסה להגדרת התאריך, ובהתאם לסדר הבא באמצעות מקש UP או DOWN להשלמת ההגדרה שלו, לחצו לחיצה ארוכה על הגדלה / הקטנה מהירה. שנה → חודש → יום → יציאה. במצב ההתקנה, שמרו למשך 10 שניות מבלי ללחוץ על שום מקש, ותוך חזרה למצב שעה.

## הגדרת התראה

3. בכל מצב, לחצו על לחצן ALARM להצגת מצב ALARM, ולחצו על הפעלה/כיבוי. בכל מצב, לחצו לחיצה ארוכה על לחצן ALARM למשך כ-2 שניות לכניסה למצב ההגדרה, ולחצו בסדר הבא באמצעות מקש UP/DOWN להשלמת ההגדרות שלו, לחצו לחיצה ארוכה על הגדלה / הקטנה מהירה. שעה → דקה → זמן ללא שינה → בחרו בהתראה של יום עבודה (1-7 / 1-6 / 1-5) → יציאה. במצב התקנה, השאירו את מצב ההתקנה במשך 10 שניות מבלי ללחוץ על שום מקש, וחזרה למצב שעה. בזמן שההתראה נכבית, השעון חוזר באופן אוטומטי למצב התראה ופולט צליל "בי-בי". במקביל, אות ההתראה מזהבבת. בשלב זה, ניתן לעצור את ההתראה באמצעות לחיצה על כל מקש או באמצעות הפעלת ההתראה מבלי ללחוץ על לחצן במשך דקה, אולם ההתראה לא תיכבה.

## טמפרטורה

4. המרת תבנית הטמפרטורה בין °F / °C באמצעות לחיצה פשוטה על לחצן DOWN. במצב טמפרטורה, לחצו לחיצה ארוכה על מקש MODE עד להישמע צליל בי, עברו ל-LED להצגת הזמן, התאריך והטמפרטורה בסדר הזה, הזמן מוצג כ-10 שניות, התאריך והטמפרטורה מוצגים במשך 3 שניות כל אחד. לאחר מכן לחצו לחיצה ארוכה על מקש MODE עד להישמע צליל "בי-בי", מוצג זמן רגיל. תאורת האווירה מופעלת לפרק זמן ארוך, מכיוון שתאורה האווירה חמה, לאיתור הטמפרטורה קיימת שגיאה, היות שהטמפרטורה גבוהה יותר מהטמפרטורה בפועל.

## שעון מנורת הקרנה

5. מנורת ההקרנה מופעלת על פי הגדרת ברירת מחדל ותצוגת ההקרנה רגילה. לחיצה על מקש IMG בכל מצב, משמשת להפעלה / כיבוי מנורת ההקרנה, ולחצו על מקש SWAP לסיבוב תוך ההקרנה ב-180°.

## מצב לילה

6. מצב רגיל של זמן, תאריך וטמפרטורה, לחצו על מקש UP לכווןן הבהירות של שתי דרגות באופן ישיר, בהירות ברירת המחדל. במצב שעה, לחצו על מקש MODE שלוש פעמים לכניסה למצב הגדרת לילה, ולחצו על מקש UP או DOWN לפתיחה/סגירה של מצב הלילה (הגדרת ברירת המחדל היא לכבות את מצב הלילה). כאשר מצב הלילה מופעל, הגדרת ברירת המחדל היא 18:00 עד 06:00. כאשר מצב הלילה מופעל, לחצו לחיצה ארוכה על מקש MODE במשך כ-2 שניות לכניסה להגדרת מצב הלילה, ההגדרה היא כדלהלן: התחלה → סוף → סוף.

## היעדר הפרעות בליטה

7. במצב אל מוגדר, לחצו לחיצה ארוכה על לחצן ON במשך יותר מ-3 שניות לכיבוי תצוגת ה-LED, למניעת הפרעת תאורת מסך לילה בשינה. לאחר כניסה למצב כבוי, באפשרותכם ללחוץ על כל מקש לפתיחת תצוגת ה-LED.




## שעון דיגיטלי עם מקרן לקיר (טעינת USB) 5187 מדריך למשתמש

### פונקציות

- תצוגת 4 LED ביט זמן תצוגת הקרנה 4 ביט על מסך LCD.
- פונקציית שעון: תצוגת שעה, דקות, והחלפה בין 12/24 שעות.
- פונקציית תאריך: תצוגת "חודש", "יום" "שנה" (מ-2000 עד 2099).
- פונקציית התראה: הגדרת התראה יומית.
- טמפרטורה: תצוגת טמפרטורה ב-°F או °C, והחלפה ביניהן. טווח מדידה רגיל -10°C~50°C (-14F~122F).
- מצב תצוגה: תחת מצב טמפרטורה, לחצו לחיצה ארוכה על מקש MODE למעבר למצב תצוגה.
- פונקציית כוונן בהירות: לחצו על מקש UP לכוונן שתי דרגות בהירות. פונקציית חצי בהירות אוטומטית: 00:00-6:18 מעמדם בהירות אוטומטי, ועם יכולת להגדיר אינטרוול חצי בהירות אוטומטי.
- פונקציית זיכרון זמן (סוללה 3 וולט).
- הספק: DC 5 וולט.

### תרשים מקשים

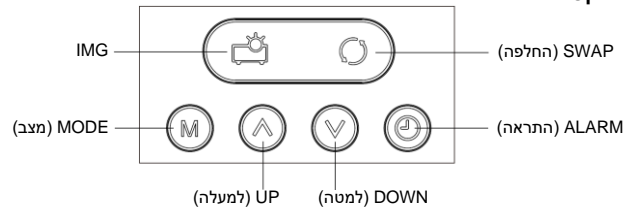

### הפעלה

1. הפעלה, תצוגת LED תעלה תוך כ-2 שניות, לאחר מכן יישמע צליל ואנו בתכנות לשעון הרגיל, ברירת המחדל של המערכת היא 12 שעות AM / PM. כעת, לחצו על מקש MODE לכניסה לשדות בסדר הבא: מצב שעות → מצב תאריך → מצב טמפרטורה → הפעלה / כיבוי בליטה.
2. במצב שעה, לחצו לחיצה ארוכה על מקש MODE לכניסה למצב הגדרה, ולחצו על מקש UP או DOWN לכוונן הערכים.
3. כנ"ל למצב תאריך.
4. לתכנות שעון ממורר לחצו לחיצה ארוכה על מקש ALARM לכניסה למצב הגדרות, ולחצו על מקש UP או DOWN לכוונן הערך.
5. להפעלה או כיבוי הערך, לחצו על לחצן ALARM להצגת מצב התראה. לחצו על לחצן ALARM להפעלה או כיבוי ההתראה.
6. לשינוי הבהירות של התצוגה, במצב זמן/תאריך או טמפרטורה, לחצו על מקש UP לכוונן ישיר של הבהירות.
7. הנורות מתעממות בצורה אוטומטית בין בשעה 18:00 ל-6:00 כאשר מצב הלילה מופעל.
8. לשעון יש מצב של תצוגת מתחלפות, לכניסה למצב תצוגת טמפרטורה, לחצו על מקש MODE והחזיקו עד להישמע צליל, התצוגה תתחלף להצגת הזמן/ התאריך/ והטמפרטורה בסדר הזה. לחצו שוב על מקש MODE לחזור לתצוגה רגילה.
9. להחלפת תצוגת טמפרטורה בין ל-°C או °F התחילו ממצב טמפרטורה ולחצו על מקש DOWN להמרה ל-°C או °F.
10. להפעלת מנורת המקרן לתצוגת השעון על קיר/תיקרה: לחצו על מקש IMG להדלקה או לכיבוי מנורת המקרן; ניתן גם "להפוך" את התצוגה על הקיר, לחצו על מקש SWAP לסיבוב התצוגה ב-180°.
11. הספק: DC 5 וולט.
12. פונקציית זיכרון זמן (סוללה 3 וולט)